

Operating Instructions For

PHAZR-5

Cable Remote Control

UR5L-9000L & UR5L-9020L



Universal Remote Control, Inc.
www.universalremote.com
OCE-0087A REV 35 (05/23/24)

1 Introduction


The PHAZR-5 UR5L-9000L & UR5L-9020L is designed to operate the CISCO / SA, Pioneer, Pace Micro, Samsung and Motorola digital set tops, Plus the majority of TV, AUD, DVD and AUX equipment on the market as shown below.

CBL : Cable Set-top Box
AUD : Audio Receivers
AUX : Media PC, Gaming System, etc.

2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

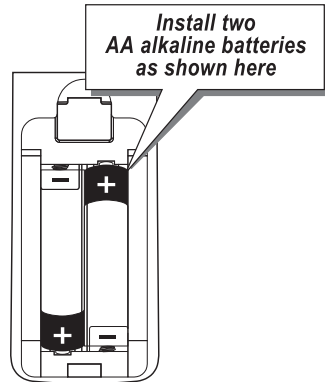

3 Operations


DEFAULT STATE

Device Default: Cable Set-Top Box (STB)
Channel Default: CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or AUD. Refer to section L for programming steps.

Volume Default: Volume and Mute control are automatically transferred to the respective Component based on the Device selected:

CBL:Cable Set-Top Box ; **TV:**TV ; **AUD:**AUD.
DVD:TV ; **AUX:**AUX. You have the option of controlling CABLE Volume and Mute through the TV, DVD or AUD. Refer to section K for programming steps.

4 Button Functions

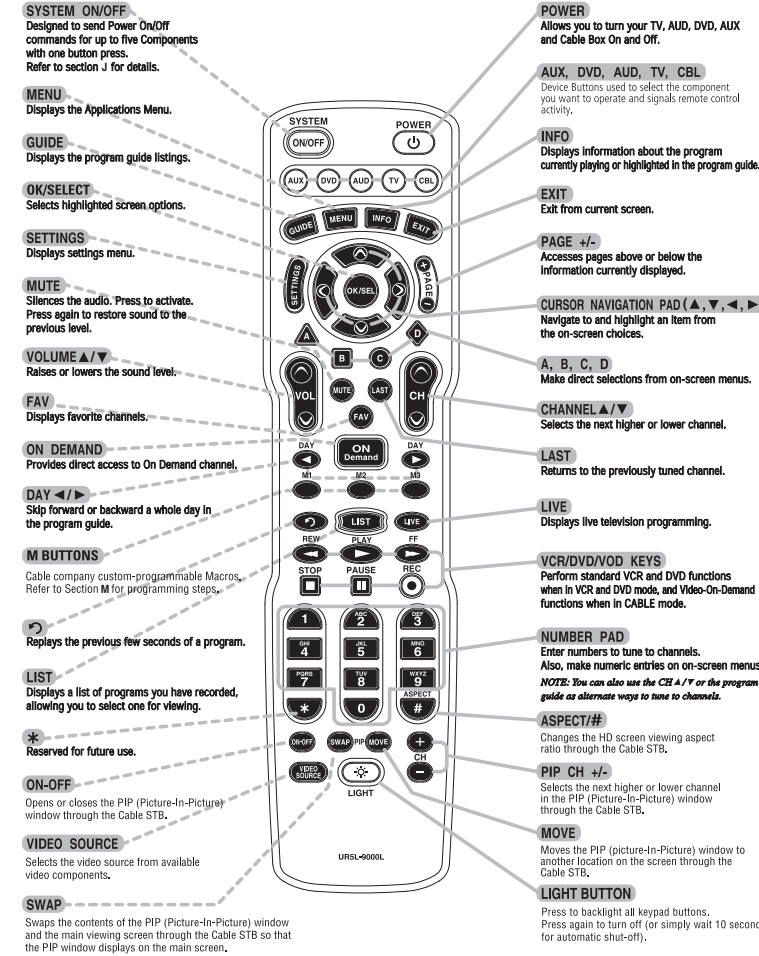

5 Programming the Remote Control

IMPORTANT SETUP NOTE!

In this section when you are instructed to press a [DEVICE] button, that means to press either the CBL, TV, AUD, DVD or AUX button, depending on what device you are programming the remote to operate.

There are four ways you can program your remote:

- * Quick Set-Up Method
- * The Pre-Programmed 3-Digit Code Method
- * The Auto-Search Method
- * The Learning Method

The Quick Set-Up Method is a unique feature that enables the fastest and easiest setup by using a 1 digit code. This is the quickest way to set up devices made by popular manufacturers.

The Pre-Programmed Code Method allows you to setup all of the buttons at once by entering 3-digit code numbers that correspond with the components manufacture/brand. Code tables for this method are on the backside of the operating instructions.

The Auto-Search Method scans through all of the codes in the remote control, one at a time allowing you to identify the correct code.

The Learning Method allows you to transfer functions from other remotes to the PHAZR-5 one button at a time.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode the device LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode, and you will need to start over.

A. Quick Set-Up Method

- STEP1** Turn on the component you want to program. To program your TV, turn on the TV.
- STEP2** Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

- STEP3** Point the remote control at the component.
- STEP4** Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components (CBL, TV, AUD, DVD, AUX).

B. Quick Set-up Code Tables

CBL

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

AUDIO

Quick Number	Manufacturer/Brand
0	ROTEL
1	DENON
2	YAMAHA
3	MARANTZ
4	SONY
5	INTEGRA
6	HARMAN KARDON
7	PIONEER
8	ONKYO
9	LEXICON

DVD

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

AUX

Quick Number	Manufacturer/Brand
0	BOSE
1	HP
2	ONKYO
3	APPLE / iPod
4	MICROSOFT / XBOX
5	SONY / PS2
6	LUTRON
7	X-10
8	YAMAHA
9	ROKU

C. Pre-Programmed 3-Digit Code Method

- STEP1** Turn on the equipment that you want the remote control to operate (Cable Box, TV, DVD, etc.).
- STEP2** Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.
- STEP3** Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

- STEP4** Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

D. Auto-Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

- STEP1** Turn on the equipment that you want the remote control to operate (Cable Box, TV, DVD, etc.).
- STEP2** Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be

programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

- STEP3** Press the [CH ▲] or [CH ▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH ▲] or [CH ▼] button as soon as the equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

- STEP4** Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. The Learning Method

- STEP1** Press the [DEVICE] button (TV, AUD, DVD, or AUX) to be programmed and the [ASPECT] buttons simultaneously for 3 seconds until the Device LED light turns on.
- STEP2** Point the PHAZR-5 at the other remote, head-to-head, 1 or 2 inches apart.
- STEP3** Press the button on the PHAZR-5 that you want to teach a command to. For example, press the [MUTE] button to learn a command to the [MUTE] button.
- STEP4** Press and hold the button on the other remote that corresponds to the command you want to teach until the PHAZR-5 Device LED light blinks twice.

***Note :** The LED will blink 5 times if there was an error in the learning process. Repeat STEPS 3 and 4 if this occurs. Continue learning other buttons by repeating STEPS 3 and 4.

- STEP5** Once you have completed teaching the PHAZR-5 all desired commands for the component, save the learned commands by pressing the [DEVICE] and [ASPECT] buttons simultaneously until the Device LED blinks 3 times. Now test all of the buttons to make sure they operate correctly.

F. Erasing a Single Learned Command

- STEP1** Press the [DEVICE] and [ASPECT] buttons simultaneously for 3 seconds until the Device LED light turns on.
- STEP2** Press and hold the button you want to erase for 3 seconds. The Device LED will blink twice to confirm the erasure.
- STEP3** To exit, press and hold both the [DEVICE] and [ASPECT] buttons simultaneously until the Device LED blinks 3 times.

G. Erasing All Learned Commands from One Device

- STEP1** Press the [DEVICE] and [ASPECT] buttons simultaneously for 3 seconds until the Device LED light turns on.

- STEP2** Press and hold both the [DEVICE] button you want to erase and the [PAUSE] button for 5 seconds. The Device LED will blink twice to confirm the erasure.

- STEP3** To exit, press and hold both the [DEVICE] and [ASPECT] buttons simultaneously

H. To Identify the 3-Digit Code Programmed for a Device

- STEP1** Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.
- STEP2** Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

Example : One blink, (pause) three blinks, (pause) eight blinks indicates the code number 138.

***Note :** Ten blinks indicates the number 0.

I. Programming the AUX Device

You can take advantage of the AUX function to program a devices such as a media PC, gaming console or satellite radio receiver. Follow the instruction in section C to program an AUX device. You can also program the AUX button for a second TV, DVD or Audio Device. To do this follow the instructions below.

- STEP1** Turn on the 5th device you want to program (TV, AUD, DVD, etc.).
- STEP2** Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] device LED will turn on for 30 seconds.
- STEP3** Press the [Device] button For the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

***Note :** To program a second TV press TV, etc.

- STEP4** When the equipment turns off verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, enter the next 3-digit code number from the brand list.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The [AUX] LED light will blink twice to confirm the code was stored.

J. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Press the first [DEVICE] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.
- STEP4** Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

K. Programming Volume Control

Volume and Mute control are factory programmed to automatically transfer to the respective Device mode You select, as follows:

CBL : CBL **TV** : TV **AUD** : AUD
DVD : TV **AUX** : AUX

If you wish to store the TV volume control in CBL mode, use the following steps.

- STEP1** Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.
- STEP2** Press the [VOL ▲] button. The device LED will blink.
- STEP3** Press [TV] button. The device LED will blink twice to confirm the programming.

***Note :** To return CBL device to CBL volume repeat steps above replacing [TV] with [CBL] in Step 3.

L. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Device to operate in another Device mode. Default channel control settings on the remote control are as follows:

CBL : CBL **TV** : CBL **AUD** : AUD
DVD : DVD **AUX** : AUX

If you wish to store the TV channel controls in TV mode, use the following steps.

- STEP1** Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.
- STEP2** Press the [VOL ▼] button. The device LED will blink.
- STEP3** Press [TV] button. The device LED will blink twice to confirm the programming.

***Note :** To return TV device to CBL channel repeat steps above replacing [TV] with [CBL] in Step 3.

6 Set-up Code Tables

CBL

Manufacturer/Brand	Set-Up Code Number
CISCO/SA	001 003 041 042 045 046 313
PIONEER	001 103 034 051 063 076 105
PACE	001 002 005 206 217
SAMSUNG	001 030
MOTOROLA	002 111 148 206 253
ADB	254
Amino	219 260 235 321
ARRIS	243 172 216 140 234 242
Bell Fibe	229
Blue Stream	238
BT Vision	232 960
CE-LABS	164
Cincinnati Bell	220
COMCAST	195
Cox Digital Cable	223
DIGEO	153
Digital Multimedia Technology	222
Dish Network	161 122
Duoson	218
Entone	221 213
EVOLUTION	189 215
Evolution Digital	238
EVOLUTION FTA	158
Foxtel	228
Frontier	239
GENERAL INSTRUMENT	005 103 104
HAMLIN	049 050 055
HITACHI	103 055
Horizon	225
Humax	960 231
Innovative Systems	262
JERROLD	005 004 103 005 003 008 009 010 069
Layer3	226
MAGNAVOX	010 012
MEMOREX	052
MOXI	111 252 153
NFUSION	192
Optimum	245 236 237
PANASONIC	044 047
PHILIPS	006 012 013 020 085
Pico Digital	224
PULSAR	052
RCA	047
RCN	238
REGAL	049 050
REGENCY	057
SKY	230 204 240 241
SONY	108
Spectrum	231
SPRUCER	047
TECHNICOLOR	365
TELNET	354
Time Warner	001
TOCOM	039 040 056
TOSHIBA	052
VIEWSTAR	012 015
Virgin Media	959
WINDSTREAM	212
ZeeVee	227
ZENITH	052 060 093 100

TV

Manufacturer/Brand	Set-Up Code Number
A MARK	112 143
ACCURIAN	036
ADMIRAL	072 251 333
AD NOTAM	672
ADVENT	247 388
ADVENTURA	002
AFFINITY	680
AKAI	116 248 404 475 323 387 391 615
ALBATRON	017
ALERON	028
AMERICA ACTION	043
AMPRO	073
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	116 363 112 616
APEX	572
APEX DIGITAL	006 724
AQUAVISION	573 574 686 904
ASTAR	477
AUDIOVOX	076 454 388
AVENTURA	052
Avera	761
AVIELO	627 628
AVION	441
AXESS	711
AXION	039
BELCOR	116
BELL&HOWELL	333 072
BENQ	423 600
BOXLIGHT	266
BRADFORD	043
BROCKWOOD	116
BYDESIGN	031 032
CANDLE	116 002 003 363
CARY AUDIO DESIGN	266
CELEBRITY	001
CENTURION	116
CETRONIC	043
CHANGHONG	247
CIELO	714
Cii	732
CITIZEN	116 002 003 363 043 258 143
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COBY	640 641 671 363
COLORTYME	116
CONCERTO	363
CONCERGE	073

TV	Manufacturer/Brand	Set-Up Code Number
CONTEC	043	050 051
Continu-us	161	746 747
CORNEA	116	
CORONADO	143	
CRAIG	043	054
CROSLEY	164	
CROWN	043	143
CURTIS MATHES	116	258 363 143
CXC	043	
CYBERHOME	015	
DAEWOO	363	043 076 143
DAYTRON	363	143
DELL	320	164 363 618
DIGITAL PROJECTION	570	
DIMENSIA	333	
DREAMVISION	235	
DUKANE	011	
DUMONT	116	073
DURABRAND	052	
DWIN	257	
DYNASTY	043	
DYNEX	400	
EIKI	187	
ELECTROBAND	001	
ELECTROGRAPH	466	
ELECTROHOME	143	024 076
ELEKTRA	072	
ELEMENT	363	494 526 622 690
EMERSON	028	048 043 116 363 050 051 076 143 154 052 514
ENVISION	116	
EPSON	324	590
ESA	323	
Evervue	755	
FISHER	007	057
FUJITSU	246	198 410
FUNAI	028	043 052
FUTURETECH	043	
GATEWAY	242	268
GE	073	116 008 009 034 056 333 363
GEM	391	
GIBRALTER	116	073
GO VIDEO	026	
GOLDSTAR	113	116 102 363 112 143
GPX	674	
GRUNPY	028	043
HAIER	363	501 623 749
HALL MARK	349	381
HANNSPREE	028	
HARLEY DAVIDSON		

TV	Manufacturer/Brand	Set-Up Code Number
HARVARD	043	
HELLO KITTY	076	
HIMITSU	043	
HISENSE	419	442 619 630 631 363 752 749
HITACHI	011	166 009 143 072 363 250 587 613 670 749
HP	421	
HUMAX	518	
ILO	472	399
INFINITY	164	
INFOCUS	333	230 547 548 470 532 564 595 733
INITIAL	282	
INSIGNIA	350	400 052 164 403 454 457 604 617 903
INTEQ	073	
JANEIL	002	
JBL	164	
JCB	001	
JCPENNEY	024	116 008 009 030 065 258 143 333 363
JVC	038	034 001 210 533 581 639 406 668 701
KAWASHO	116	001
KEC	043	
KENWOOD	116	001
KLEGG	466	
KLOSS	002	
KMC	143	
KNOLL SYSTEMS	230	659
KONKA	457	
KREISEN	530	
KTV	043	116 143 154
KURAZAI	072	
LG	363	113 116 102 112 143 569 284 648 741 598
LITEON	268	
LODGENET	072	
LOEWE	164	738
LOGIK	072	
LUXMAN	363	
LXI	166	007 138 052 251 333 164
MAGNAVOX	164	116 003 363 333 226 390 467 431 594
MAJESTIC	333	072
MARANTZ	116	164 281
MATSUI	164	
MATSUSHITA	080	
MAXENT	242	
MEGATRON	116	011
MEMOREX	007	072 363
MGA	116	363 024 028
MIDLAND	333	073

TV	Manufacturer/Brand	Set-Up Code Number
MINUTZ	008	
MISAKAI	052	
MITSUBISHI	109	024 028 363 348 450 658
MONIVISION	017	
MONTGOMERY WARD	333	072
MOTOROLA	081	
MTC	116	363 258
MULTITECH	043	
NAD	138	
NEC	272	197 116 024 056 019 262 236 281 575 717 758
NET TV	242	
NEXUS	620	454
NIKEI	043	
NIKKO	116	
NIKO	527	
NORCENT	390	
NUVISION	351	567
OLEVIA	432	363 333
ONKING	043	
onn.	898	
ONWA	043	
OPTOMA	265	249
OPTONICA	019	251
PANASONIC	080	034 056 164 208 359 552 524 607 664 801
PEERLESS-AV	723	763
PHILCO	116	003 164 363 024 056
PHILIPS	164	038 116 003 363 206 431 333 161 594 629 727 773
PILOT	116	
PIONEER	234	116 393 272 520 582 660
PLANAR	728	742 787 788
POLAROID	388	323 328 353 354 355 356 494 387 391 505 506 508 526
PORTLAND	363	143
PRINCETON	004	
PRISM	034	
PROSCAN	333	722
PROTON	363	112 143 528
PROTRON	392	398 498 499 500
PROVIEW	494	
PROX	572	
PULSAR	116	073
PYLE HOME	661	662
QUASAR	034	056
RADIO SHACK	019	363 143 043
RCA	333	065 116 363 024 056 161 588 713 751
REALISTIC	007	019 043

TV	Manufacturer/Brand	Set-Up Code Number
REVOLUTION HD	466	
RUNCO	073	395 416 072 342 697 698
SAMPO	116	363 242
SAMSUNG	258	050 363 143 333 228 229 515 655
SAMSUX	116	
SANSEI	076	
SANSUI	400	615 454 762
SANYO	007	166 057 187 511 266 657 750
SCPTRE	276	699
SCOTCH	116	
SCOTT	028	043 048 143 363 497
Sealoc	897	
SEARS	030	363 007 028 057 143 333 166 138
SEIKI	690	
SELECO	205	011
SEURA	704	797
SHARP	251	019 028 363 143 308 684 692 735 765 766
SHENG CHIA	081	
SHERWOOD	349	
SHOGUN	116	
SIGNATURE	072	
Silo	001	
SIMPSON	003	
Skyvue	648	
Skyworth	895	
SONY	001	608 646 651 702 633
SOUNDESIGN	028	363 003 043
SOVA	041	
SOYO	528	
SPECTRICON	112	
SPECTRONIQ	499	500
SQUAREVIEW	052	
SSS	363	043
STARLITE	043	
SUNBRITE	633	634 635 386 605 772 901 902 907
SUPERSCAN	052	081
SUPRA	116	
SUPRE MACY	002	
SUPREME	001	
SVA	328	
SYLVANIA	116	003 052 164 333 514 593
SYMPHONIC	052	
SYNTAX OLEVIA	432	363 333
TANDY	251	
TATUNG	056	
TCL	705	749
TECHNICS	034	080
TECHNOL ACE	028	
TECHVIEW	045	
TECHWOOD	363	

TV	Manufacturer/Brand	Set-Up Code Number
TEKNIKA	002	003 363 024 028 043 072 258 143
TELEFUNKEN	037	046 615
TELERENT	072	
THOMSON	049	055
TMK	363	
TELEVISION	663	
TNCI	073	
TOSHIBA	138	030 007 258 325 230 703
TOTEVISION	143	
UNIVERSAL	008	009
UPSTAR	708	
VENTURER	721	
VICTOR	038	
VIDIKRON	174	164 188 192 342
VIDTECH	363	
VIEWSONIC	242	389 720
VIKING	002	
VIORE	472	592 258
VISCO	526	
VITO	363	
VIZIO	386	387 624 625 675
WARDS	363	008 009 019 028 072 143 164 034
W Box Technologies	731	
WESTINGHOUSE	076	276 435 001 280 690 695
YAMAHA	116	363 370
YORK	363	
YUPITERU	043	
ZENITH	363	073 072
ZONDA	112	

TV-Projectors

Manufacturer/Brand	Set-Up Code Number
AVIELO	627 628
AWOL Vision	905
BENQ	423
BOXLIGHT	266
DELL	618
DIGITAL PROJECTION	570
DREAMVISION	235
EPSON	590 794
FUJITSU	410
HITACHI	250
INFOCUS	230 532 564 595 726
JVC	533 406 701
KNOLL SYSTEMS	230 659
MARANTZ	281
MITSUBISHI	348 658
NEC	236 281
OPTOMA	249
PANASONIC	359 607
RUNCO	342
SANYO	511 266 657
SELECO	205

TV-Projectors

Manufacturer/Brand	Set-Up Code Number
SHARP	308
SIM2	205
SONY	646 702
TOSHIBA	230
VIDIKRON	342 174 188 192
YAMAHA	370

AUDIO

Manufacturer/Brand	Set-Up Code Number
ADCOM	082 092 225 161 269 356
AIWA	018 104 202 203 213 211 188
AKAI	189
ANTHEM	335 337 655 656
ARAGON	687
ARCAM	141 077
ATLANTIC TECHNOLOGY	342
AUDIO FILE	071
B & K	096 097
BOSE	070 224
BOSTON ACOUSTICS	447
CAMBRIDGE AUDIO	684 077 100 745 746
CARVER	006 028 061 071 201 214 226 185 013 077 284
CARY AUDIO DESIGN	378
CITATION	148
CLARION	026
DENON	340 109 215 230 234 330 679 774 913 636
DIGITAL PROJECTION	660
DVICO	570
ELAN	057 290
Emotiva	886
ENLIGHTENED AUDIO	099 098
ESCIENT	451
FISHER	214 182
FLEXTRONICS	378
FOSGATE AUDIONICS	148 342
GOLDSTAR	008
HARMAN KARDON	318 148 233 077 028 118
HITACHI	020
iLive	730 803 538
Insignia	399
JCPENNEY	216
JVC	163 191 114 279 291
KENWOOD	026 066 145 192 182 005 280 374
KLEGG	686
KLH	331
KLIPSCH	687
KOSS	216
KRELL	072 384 672
LEXICON	357 120 235 236 237 360
LINN	124 377
LUXMAN	009 139 052 165 115 004
MAGNAVOX	086 164 152 077
MARANTZ	006 028 031 040 063 185 186 265 289 492 712 719
MCINTOSH	238 286 311 819
MERIDIAN	100 012 013 628
MITSUBISHI	242 204
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NILES	403
ONKYO	046 275 017 108 080 209 381
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292 626
PARASOUND	129 130 132 261 294 295 333 334
PHILIPS	249 250 063

AUDIO

Manufacturer/Brand	Set-Up Code Number
PIONEER	480 014 039 044 069 168 116 035 063 198
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 073 075 095
ROTEL	083 074 085
SAMSUNG	016
SANSUI	040 048 110 063 065 228
SANYO	214
SCOTT	019
SHARP	026 094 175
SHERWOOD	024 102 106 447 370
Sanance	750
SONY	001 018 247 248 166 101 184 218 271 560 612
SOUNDESIGN	036
SUNFIRE	344 345 182
TEAC	005 019 049 040 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
Trinnov	628
VIZIO	551
YAMAHA	205 026 253 169 067 173 264 232 089 264 274 715 717 644 695 738 756 661
ZENITH	143 210

AUDIO-SOUNDBAR

Manufacturer/Brand	Set-Up Code Number
ARCAM	100
Autonomics	795
Be'lto Digital	534
Bose	799 548 630
BOWER & WILKINS	467
Cambridge Audio	815
DEFINITE TECHNOLOGY	582 703 537
DENON	728 774 927
Dynex	802
ENERGY	602
Episode	629
Harman Kardon	531
iLive	730 803 538
Insignia	802
INTEGRA	741
JBL	531
KLIPSCH	602 797 798 540 543 544 545
LG	700 541
Magnavox	520
MARTIN LOGAN	763 517
Nakamichi	659
Onkyo	557 741
Panasonic	257
PARADIGM	618 708 758 517
Peerless-AV	558
PHILIPS	727 526
PINNACLE	606
Pioneer	641
POLK AUDIO	605 732
Pyle	518
RCA	521
Samsung	522
Sennheiser	643 645
SENTRY	729
Sharp	801 546
Sony	529 697
SPEAKERCRAFT	562
TOSHIBA	608
VIZIO	665
YAMAHA	568 644 725
ZVOX	796 535 477

DVD

Manufacturer/Brand	Set-Up Code Number
ACCURIAN	003 268
ADCOM	157
ADVENT	005
AIWA	146
AKAI	281
ALLEGRO	091
ALPINE	098
AMW	006 007
ANTHEM	361
APEX DIGITAL	087 111 115
ARCAM	122 374
ASPIRE DIGITAL	008 009
AUDIOVOX	003 010 014 015 149
BEL CANTO DESIGN	016
BLAUPUNKT	111
BROKSONIC	130
BUFFALO	264
CALIFORNIA AUDIO LABS	021 124
CAMBRIDGE AUDIO	323 333 360
CARY AUDIO DESIGN	174 266
CENTRIOS	019
CINEVISION	091
CITIZEN	020
COBY	260
CYBERHOME	271
DAEWOO	132
DENON	173 080 138 329 358
DIAMOND VISION	037 038 039
DISNEY	040 096
DUNE	366
DURABRAND	091
DVD 2000	017
DYNEX	349
EMERSON	091 143
ENTERPRISE	074
ESA	022 143
FISHER	147
FUNAI	143
GATEWAY	222
GE	027
GO VIDEO	137 091 220 221 222
GOLDSTAR	