


# Operating Instructions For 4-Function Cable Remote Control

UR4U-MDVR2

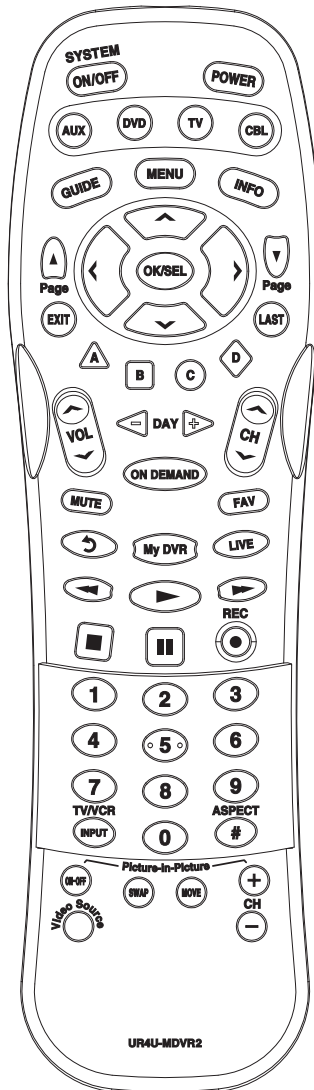

Universal Remote Control, Inc.  
www.universalremote.com  
OCE-0053B REV 38 (10/22/18)

## 1 Introduction


This remote control is designed to operate all Motorola and Scientific Atlanta digital set top boxes (including HD and DVR), plus the majority of TVs, DVDs and AUDIO equipment on the market as shown below.

**CABLE** : Cable Converters **TV** : Televisions  
**DVD** : DVDs, TV/DVDs  
**AUX** : Audio Receivers and DVRs, etc.

## 2 Replacing Batteries

Before you program or operate this remote control, you must first install two new AA Alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

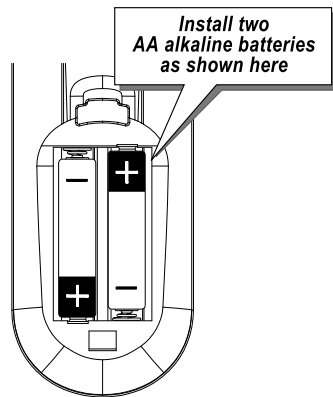

## 3 Operations

**DEFAULT STATUS:**  
**Component Default:** CABLE  
**Channel Default:** CABLE channel +/- and numbers operate through the CABLE box. You have the option of controlling channel +/- and numbers through the TV or DVD. Refer to section H for programming steps.

**Volume Default:** CABLE volume +/- and mute operate through the TV. You have the option of controlling volume through the Cable box or DVD. Refer to section I for programming steps.

## 4 Button Functions

**SYSTEM ON/OFF**  
Designed to send Power On/Off commands for up to four Components with one button press. Refer to section G for details.

**POWER**  
Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

**AUX, DVD, TV, CBL**  
Used to select the component you want to operate and signals remote control activity.

**MENU**  
Displays the Applications Menu.

**INFO**  
Displays information about the program currently playing or highlighted in the program guide.

**GUIDE**  
Displays the program guide listings.

**PAGE ▲/▼**  
Accesses pages above or below the information currently displayed.

**SELECT**  
Selects highlighted screen options.

**CURSOR NAVIGATION PAD (▲, ▼, ◀, ▶)**  
Navigate to and highlight an item from the on-screen choices.

**EXIT**  
Exit from current screen.

**LAST**  
Returns to the previously tuned channel.

**DAY ▲/▼**  
Skip forward or backward a whole day in the program guide.

**A, B, C, D**  
These functions are pre-set by your cable provider.

**VOLUME ▲/▼**  
Raises or lowers the sound level.

**ON DEMAND**  
Provides direct access to On Demand channel.

**CHANNEL ▲/▼**  
Selects the next higher or lower channel.

**MUTE**  
Silences the audio. Press to activate. Press again to restore sound to the previous level.

**FAV**  
Displays favorite channels.

**LIVE**  
Displays live television programming.

**Replays the previous 15 seconds of a program.**

**My DVR**  
Displays a list of programs you have recorded, allowing you to select one for viewing.

**VCR/DVD/OD KEYS**  
Perform standard VCR and DVD functions when in VCR and DVD mode, and Video-On-Demand functions when in CABLE mode.

**NUMBER PAD**  
Enter numbers to tune to channels. Also, make numeric entries on on-screen menus. *NOTE: You can also use the CH ▲/▼ or the program guide as alternate ways to tune to channels.*

**INPUT(TV/VCR)**  
Selects the video source.

**ASPECT(#)**  
Change the HD screen viewing aspect.

**ON-OFF**  
Opens or closes the Cable Box PIP (Picture-in-Picture) window.

**PIP CH ▲/▼**  
Selects the next higher or lower channel in the PIP (Picture-in-Picture) window.

**Video Source**  
Selects the video source.

**SWAP**  
Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

**MOVE**  
Moves the PIP (Picture-in-Picture) window to another location on the screen.

## 5 Programming the Remote Control

There are three ways you can program your remote control:

- \* Quick Set-Up Method
- \* The Pre-Programmed 3-Digit Code Method
- \* The Auto-Search Method

The Quick Set-Up Method is a unique new feature that enables the fastest and easiest set-up by using one-digit codes for up to 10 major brands for each component.

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time.

### IMPORTANT SETUP NOTES:

This pertains to all programming steps. When you are in setup mode in each component, a component LED will light up for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode and you will need to start over.

When programming a combo unit, program as a DVD first.

### A. Quick Set-Up Method

- STEP1** Turn on the component you want to program. To program your TV, turn on the TV.
- STEP2** Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.
- STEP3** Point the remote control at the component.
- STEP4** Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components (CBL,TV,DVD, AUX).

### B. Quick Set-up Code Tables

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

Quick Number	Manufacturer/Brand
0	BOSE
1	HP
2	ONKYO
3	APPLE/iPod
4	MICROSOFT / XBOX
5	SONY / PS2
6	LUTRON
7	X-10
8	YAMAHA
9	ROKU

### C. Pre-Programmed 3-Digit Code Method

- STEP1** Turn on the Component you want to program (TV, DVD or AUX).
- STEP2** Press the [COMPONENT] button (TV, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED will light for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

*\*Note : If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it's time to test the VOLUME and MUTE buttons for the TV (or PLAY and STOP buttons for DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand.

- STEP5** Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

Now, program the rest of your Components by repeating STEPS 1-5.

*\*Note : If the Pre-Programmed Method did not work, or if the Code Tables do not list your Component brand, use the Auto-Search Method as explained in Section D.*

### D. Auto-Search Method

- STEP1** Turn on the Component you want to program (TV, DVD or AUX).
- STEP2** Press the [COMPONENT] button (TV, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED will light for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote toward the Component and press the [CH ▲] or [CH ▼] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH ▲] or [CH ▼] button as soon as the Component turns Off.
- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section C). If any of the functions do not work as they should, you need to find a new code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when

the functions do not work as they should, repeat from STEP 3 using [CH ▲] or [CH ▼] buttons to find the correct code.

- STEP5** Save the code. (Same as for 3-Digit Code Programming Method - Section C).

Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method.

### E. Finding a Component Button's Setup Code Number

If you used the Auto-Search Method to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

- STEP1** Press the [COMPONENT] button (TV, DVD or AUX) you want to verify and the [OK/SEL] button simultaneously for 3 seconds. The Component LED will light for 30 seconds.
- STEP2** Press the [INFO] button and count the number of times the Component LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.

*\*Note : 10 blinks represents the number zero. Example : One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.*

### F. AUX Function: Programming a 4<sup>th</sup> Component

You can take advantage of the AUX function to program a 4<sup>th</sup> Component such as a second TV, DVD or Audio Component.

- STEP1** Turn on the 4<sup>th</sup> Component you want to program (TV, DVD or Audio).
- STEP2** Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] Component LED will light for 30 seconds.
- STEP3** Press the [COMPONENT] button you want to setup. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

*\*Note : If the 3-digit code number you just entered is the correct number, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section C). If any of the functions do not work as they should, you need to find a new code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when

### G. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to four power On/Off commands with one button press.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will light for 30 seconds.
- STEP3** Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.
- STEP4** Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

### H. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Component to operate in another Component mode. Default channel control settings on the remote control are as follows:

**CBL** : CBL **TV** : CBL  
**DVD** : DVD **AUX** : AUX

If you wish to operate the TV channel control in TV mode, use the following steps.

- STEP1** Press the [TV] button and the [OK/SEL] button simultaneously for 3 seconds. The [TV] Component LED will light for 30 seconds.
- STEP2** Press the [VOL ▼] button.
- STEP3** Press the [TV] button again. The Component LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the CABLE channel control in TV mode, repeat the above steps but press [CBL] in STEP3.

### I. Programming Volume Control

You can program the volume controls (Volume Up, Volume Down and Mute) from one Component to operate in another Component mode. Default volume control settings on the remote control are as follows:

**CBL** : TV **TV** : TV  
**DVD** : TV **AUX** : AUX

If you wish to operate the CBL volume control in CBL mode, use the following steps.

- STEP1** Press the [CBL] button and the [OK/SEL] button simultaneously for 3 seconds. The

